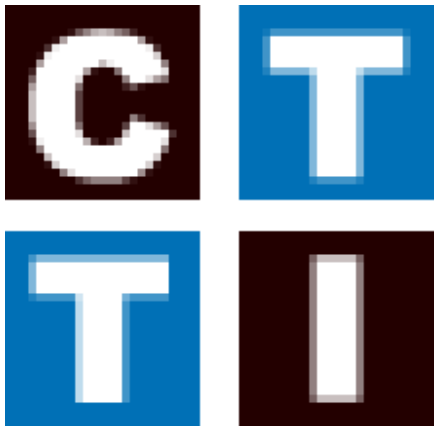

BDS Software

USER'S MANUAL

Revision Date : 02. 09. 2005.

How to make '.avi' CD from recorded images (Windows XP from Search menu)

Before you start these procedures, you have to make sure that CD recording is enabled from Windows XP.

To find out, follow the steps below.

1. “Power Off” the DVR software to go to the Windows XP desktop.

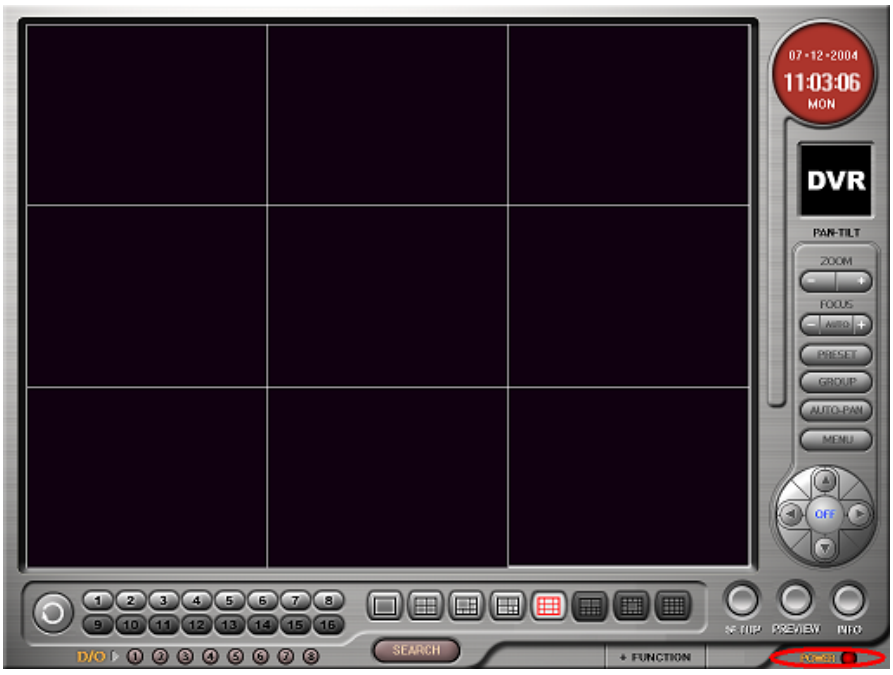

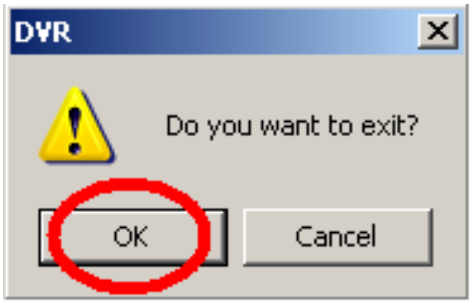

2. Double click on 'My Computer'

3. Right click on CD-RW drive (X:).

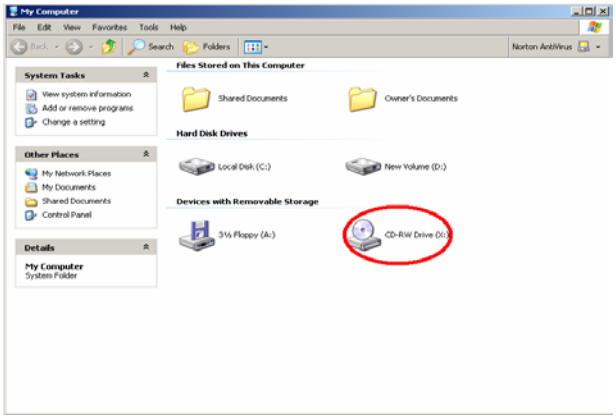

4. Click on 'Properties' and go to 'Recording' tab.

5. On 'Recording' tab, make sure there is a check mark on check box for 'Enable CD recording on this drive'

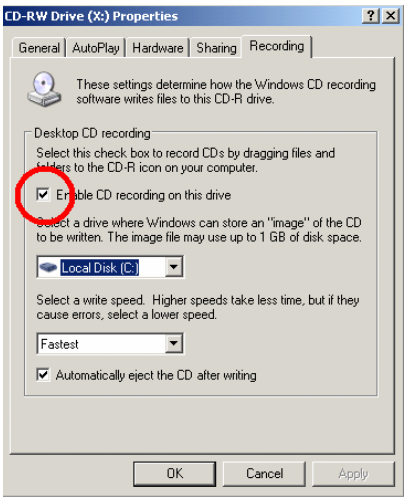
CD-RW Drive (X:) Properties
General
AutoPlay
Hardware
Sharing
Recording
These settings determine how the Windows CD recording software writes files to this CD-R drive.
Desktop CD recording
Select this check box to record CDs by dragging files and folders to the CD-R icon on your computer.
Enable CD recording on this drive
Select a drive where Windows can store an "image" of the CD to be written. The image file may use up to 1 GB of disk space.
Local Disk (C:)
Select a write speed. Higher speeds take less time, but if they cause errors, select a lower speed.
Fastest
Automatically eject the CD after writing
OK
Cancel
Apply

6. Click on 'OK' to exit from CD-RW Drive properties.

***Note:* Once you confirm or configure, you do not have to follow these procedure anymore.**

After it is confirmed, put a blank CD into the CD-RW Drive and follow the steps below.

Steps:

1. From the DVRS software screen, click on 'SEARCH'.

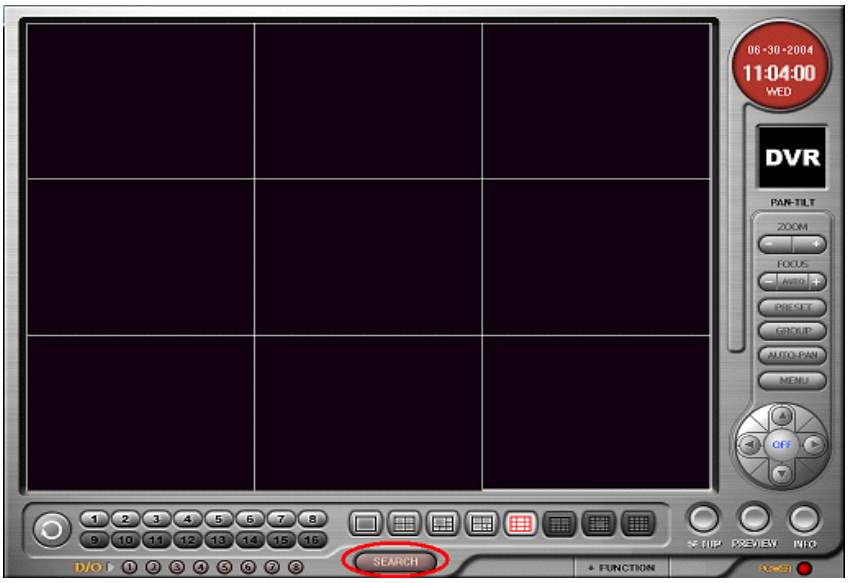

2. Select the cameras and date.

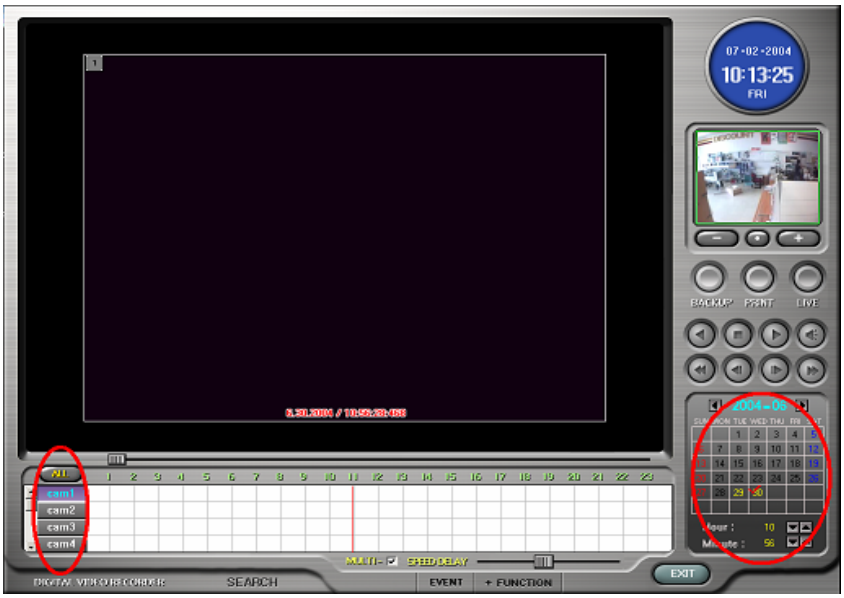

NOTE: The dates shown in yellow indicate that the images of those dates are currently available in your hard drive.

3. By click and hold on vertical red line, move the red line to set as starting point of image that need to be burn on CD.

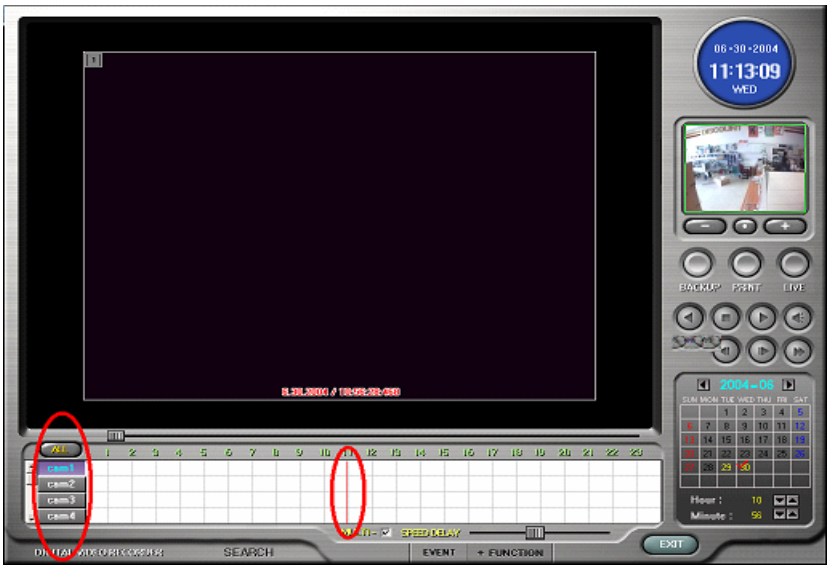

OR

You could set the specific hours and minutes by clicking up or down arrows.

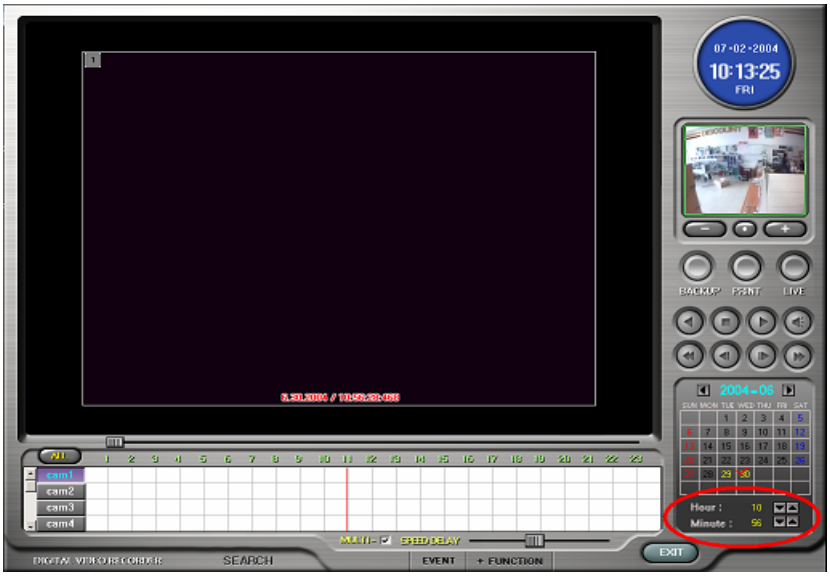

4. Click on '+FUNCTION' and click on 'AVI'

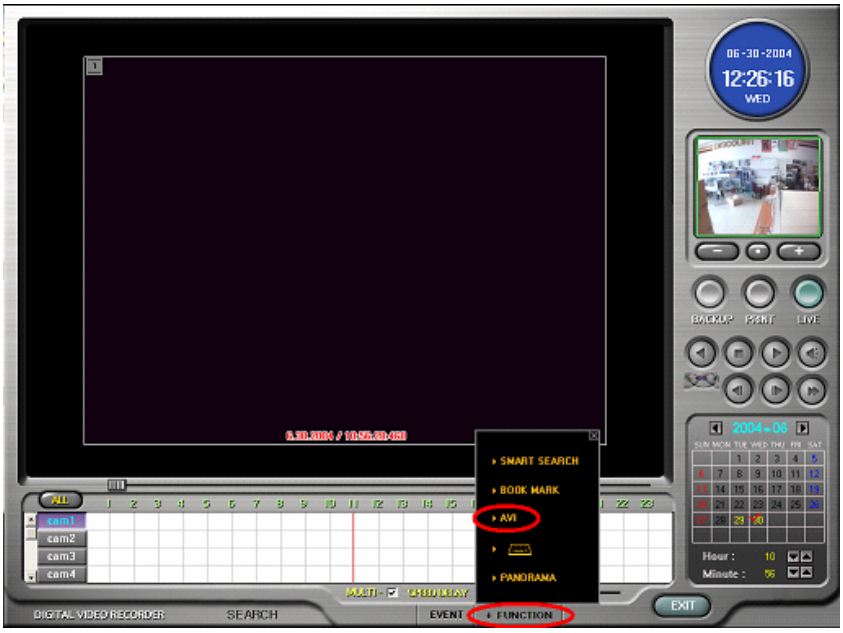

5. Click on 'Save File...' to locate CD-RW drive and specify the file name.

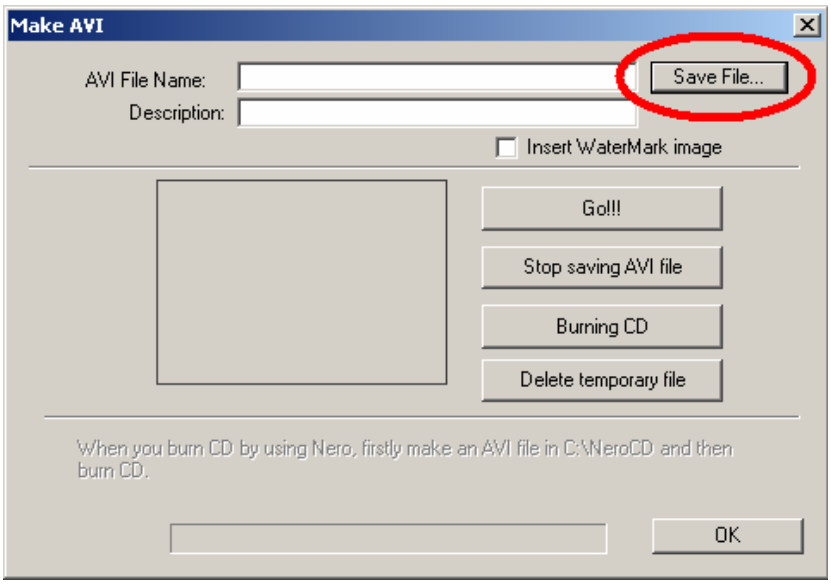

Click on down arrow.

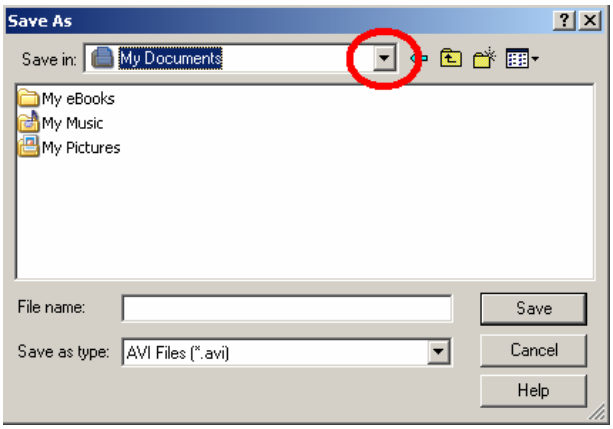

Locate 'CD-RW Drive'

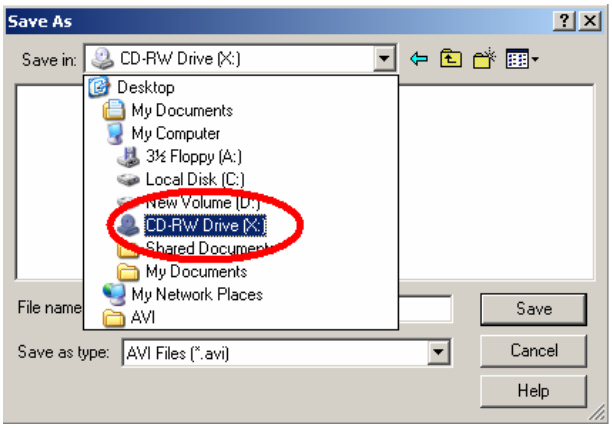

Specify the file name on 'File name:' field.

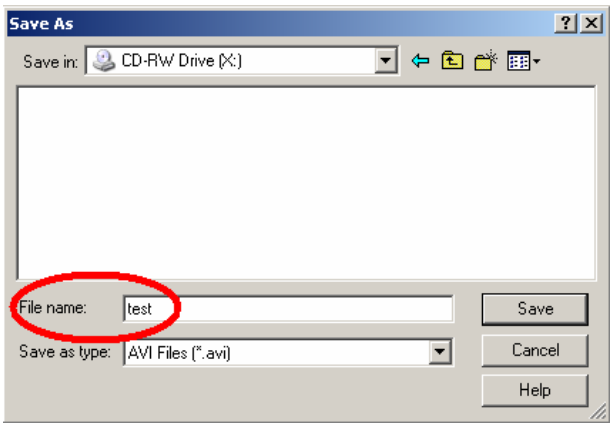

then, click on 'Save'

6. Click on 'GO!!!' to start record.

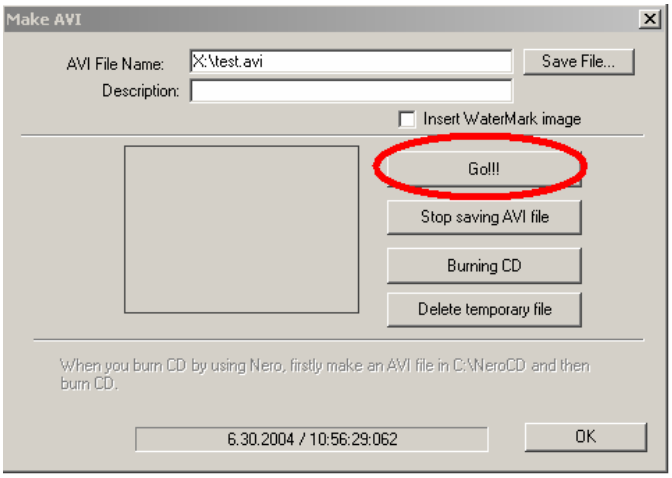

NOTE: The recording images will display on screen and you can stop recording anytime by click on 'Stop saving AVI file'.

7. After AVI file is created successfully, click on 'OK' and click on 'Burning CD'.

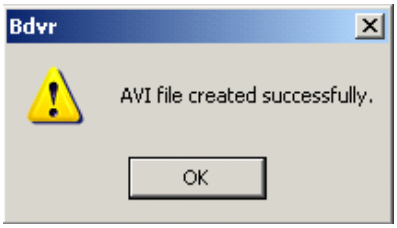

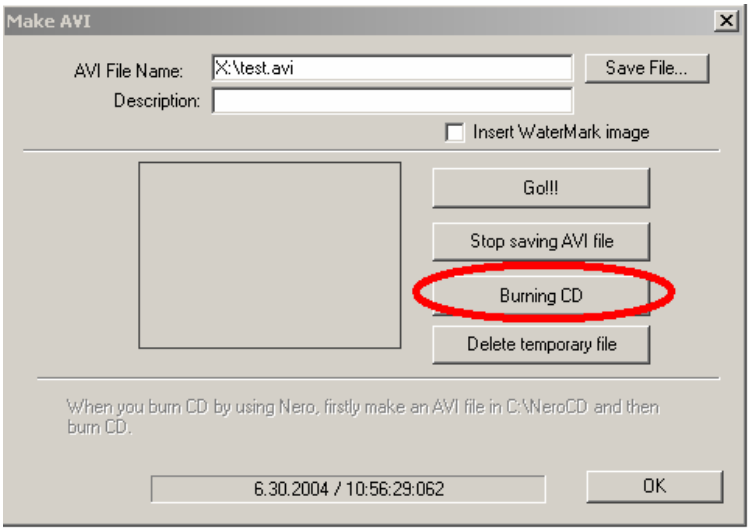

8. Give the name for CD (by default it shows date) and click 'next' to start burning.

CD Writing Wizard
Welcome to the CD Writing Wizard
This wizard helps you write, or record, your files to a CD recording drive.
Type the name you want to give to this CD, or just click Next to use the name below.
CD name:
Jul 06 2004
New files being written to the CD will replace any files already on the CD if they have the same name.
Close the wizard after the files have been written
< Back
Next >
Cancel

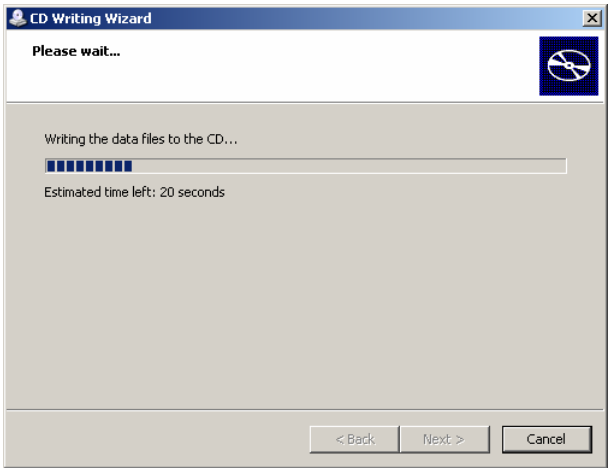

CD Writing Wizard
Completing the CD Writing Wizard
You have successfully written your files to the CD.
Do you want to create another CD using the same files?
Yes, write these files to another CD
CD software developed under license from Roxio, Inc.
To close this wizard, click Finish.
< Back
Finish
Cancel